




# MCA16 HySEIS Enhanced Multi-Unit Charger Quick Reference Guide

## Product Layout

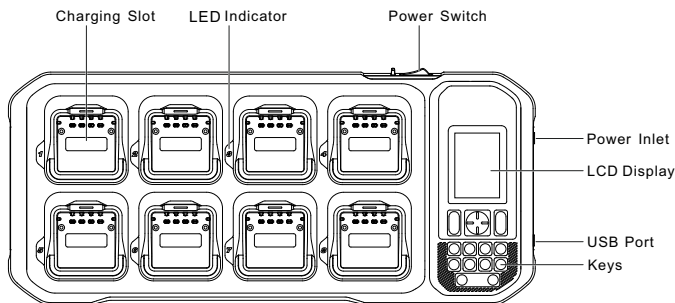


## LED Indicator

LED Indicator	Status
Flashes red slowly	The charging slot is idle.
Flashes red rapidly	The charging slot is faulty.
Glow red	The battery is charging, and its level is under 90%.
Glow green	The battery is fully charged.
Glow orange	The battery is charging, and its level is above 90%.
Flashes red and green alternatively	The battery reaches the end of its service life.

## Basic Operations

### Connect to the Power Supply

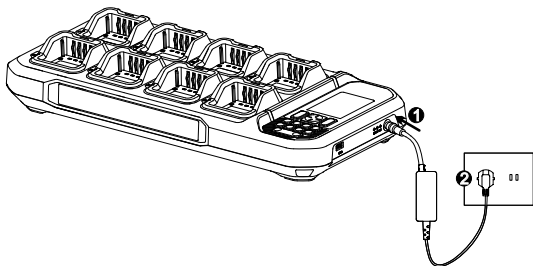

### Turn On or Off the Product

- Turn on: connect the product to the power supply, and then toggle the **Power Switch** to the "I" position.

When the product is turned on, the LCD display shows the power-on animation, and then enters the main interface.

- Turn off: toggle the **Power Switch** to the "O" position.

### Charge the Battery




#### CAUTION

Turn off the radio before charging.

Turn on the product, and then insert the battery or the radio with battery attached to the charging slot.

During charging, you can press the numeric key for that slot to view battery information.

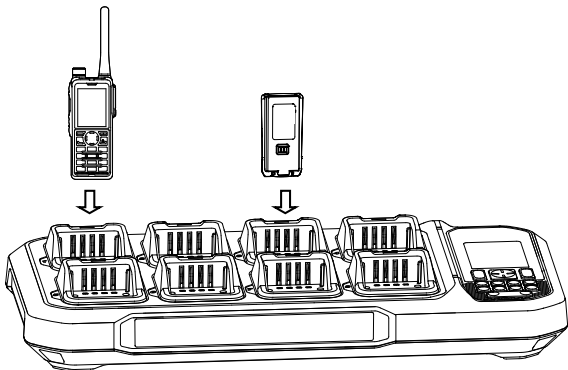

## Connect to MDM SE

To check battery status and analyze battery data on MDM SE, use a USB data cable to connect the product to your computer where MDM SE is installed.

For more information, please visit <https://www.hytera.com/en/download-center.html>.



is the trademark or registered trademark of Hytera Communications Corporation Limited.

© 2025 Hytera Communications Corporation Limited. All Rights Reserved.

Address: Hytera Tower, Hi-Tech Industrial Park North, 9108# Beihuan Road,

Nanshan District, Shenzhen, P.R.C., P518057


<https://www.hytera.com>



# MCA16 HySEIS 增强型智能快充 快速操作手册

## 熟悉产品

### 部件介绍

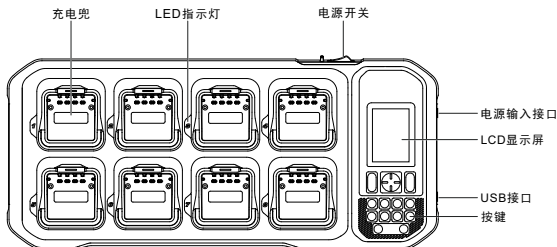


### LED 指示灯

指示灯状态	产品状态
红灯慢闪	待机
红灯快闪	故障
红灯常亮	充电中
绿灯常亮	充电完成
橙灯常亮	电池已充满90%或以上
红绿交错快闪	电池寿命到期

## 基本操作

### 连接电源

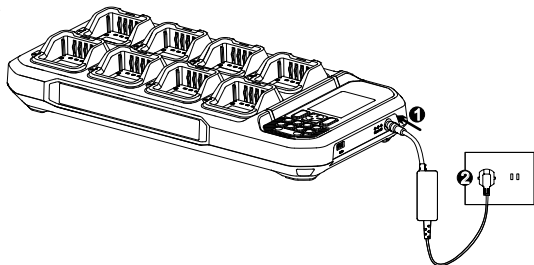

## 开关机

- 开机：在接通电源的情况下，将【电源开关】键置于“1”。  
开机后，LCD显示屏显示开机动画，然后进入系统界面。
- 关机：将【电源开关】键置于“0”。


## 为设备充电

智能排充开机后，将电池或装有电池的终端插入充电兜中进行充电。此时，按充电兜对应的数字键，屏幕显示电池信息。



### 备注

插入对讲机前，请务必将对讲机关机。

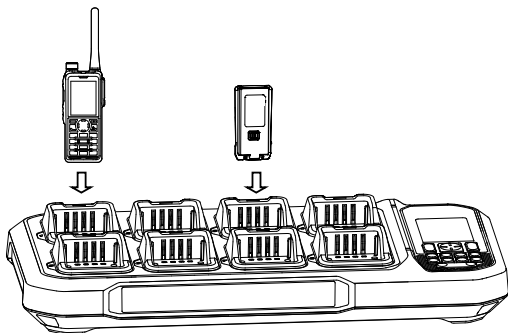

## 连接 MDM SE

使用标配的USB数据线分别连接智能排充和安装有MDM SE的PC，此时您可以通过MDM SE查看电池状态，及对电池进行统计分析。

如需了解更多内容，请访问我们的网站：<https://www.hytera.com/cn/download-center.html> 或联系经销商、我司客服获取配套的文档。



是海能达通信股份有限公司的注册商标或商标

©2025 海能达通信股份有限公司。版权所有

地址：深圳市南山区高新区北区北环路9108号海能达大厦

邮编：518057

服务热线：400-830-7020

<https://www.hytera.com>